



USER'S MANUAL

# FW-518W

## Wifi Radio

- Wifi Network Radio
- SOS function
- Software off-line update
- Group Calls

## Anywhere Anytime Communications

One button. That is all it takes to connect your team.


## Package Contents

Please carefully unpack the radio and check if all items listed below are received. If any item is missing or damaged, please contact Freeway Communications.

ITEM	QUANTITY
ANTENNA	1
CHARGER	1
ADAPTOR	1
LI-ION BATTERY	1
BELT CLIP	1
USER MANUAL	1




ANTENNA

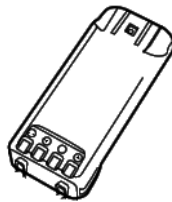


Li-ion BATTERY



CHARGER

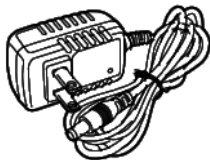

ADAPTOR

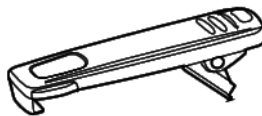


BELT CLIP



USER'S MANUAL

## Product Controls

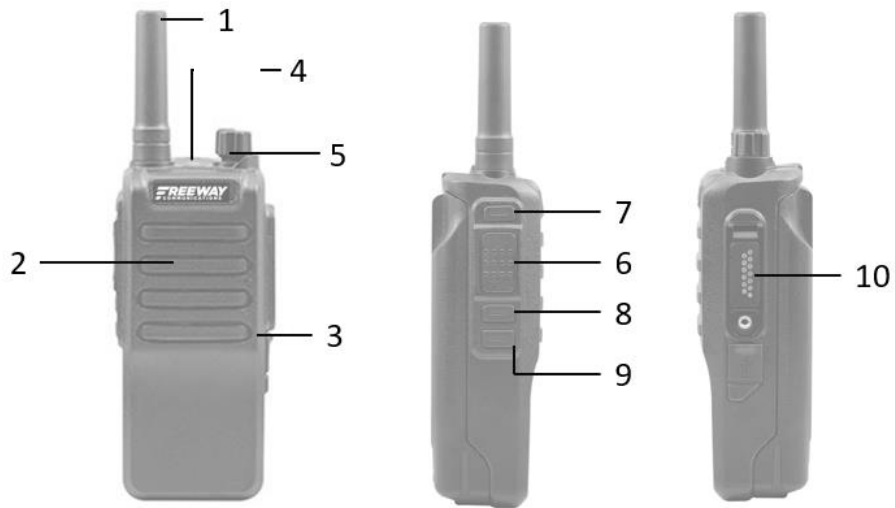

#	Description	#	Description
1	Antenna	6	PTT (Transmit)
2	Speaker	7	Menu Button
3	Microphone	8	Up Button
4	Indicator LED	9	Down Button
5	Power & Volume Control	10	Microphone Connector

## Basic Operations

### 1. Power on

Check Battery is correctly seated  
 Press the volume control to power on (2 Seconds)

### 2. Power off

Press the volume control to power off (2 Seconds)

### 3. Transmitting

Press the PTT button to transmit, keep mouth and microphone spaced at least 5cm apart.

### 4. Receiving

The LED indicator green when the radio is receiving.

### 5. Adjusting the Volume

Rotate the "Volume Control Knob / Power Key" to adjust the volume.

## Menu Introduction

- Press **MENU** Key to enter menu
- Press **Up** or **Down** Key to select items
- Long press **Down** key to return to previous list
- Press **PTT** to confirm options

	Menu	Sub-menu	Function Instruction
	Choose Group		Select active talk group
	Choose Friend		Select from pre-assigned favorite contacts (contacts are set through online portal)
	Chose User		Select to make private call with the group member(s)
	Information	Group Name	Announce Active Group Name
		User Name	Announce Radio User Name

Menu		Power Remain	Announce Battery Power Remaining
		Network Strength	Announce Network Strength (1-9)
		GPS	Announce GPS Position (if active)
		Version	Announce Current Software Version
	Account Relogging		Refresh server connection without needing to repower radio.



## After Sales Support

### Warranty Period

**Main Unit:** One year from the date of purchase.

**Accessories:** Battery, Charger and Adapter: One year from the date of purchase.

Under the following conditions, warranty will not be granted.

- Warranty claims not made within the Warranty Period.
- The defects are caused by natural disasters.
- The defects occur from misuse, abuse, accident, corrosion, fire, liquid intrusion, or neglect.
- The defects or damage are from improper or unauthorized testing, operation, maintenance, service, repair, installation, alteration, modification, or adjustment.
- Breakage or damage to antennas unless caused directly by defects in material or workmanship.
- The defects that have not been operated in accordance with the procedures described in the operating instructions.
- The defects that have been subjected to unauthorized modifications, tampering, disassembly, use of non-genuine accessories or batteries or repairs (including the addition to our product of equipment which is not supplied or authorized by us) which adversely affect performance of our radio or interfere with our normal warranty inspection and testing of our product to verify any warranty claim.
- Our product which has had the serial number removed or made illegible.
- Product that has its seal(s) on non-user serviceable components or modules broken.
- Freight costs to the repair depot.
- Product that has been subjected to illegal or unauthorized alteration of the software/firmware in our product. Scratches or other cosmetic damage to our product surface that does not affect the operation of our radio.
- Normal and customary wear and tear.

**Seller:**  
**Model:**

**Ser. No:**  
**Date:**